

Product 511444



511444 Passive holder with tilt swivel For a more secure upright and horizontal position. Padded.

The choice for you who are using your iPhone with navigation and easily want to switch between an upright position and a horizontal position; simply turn the holder into desired position! The holder provides a more secure upright and horizontal position than a standard holder. Safe, comfortable and convenient!

The holder has a neat and discreet design which blends well with the vehicle's interior. When keeping your iPhone in a passive holder, it is always within easy sight and reach. A portable handsfree or a charging cable can be connected to the device when it is in the holder. You can attach the cable to the back part of the holder, it will then be easy accessible whenever you want to use it.

The holder is made of ABS plastic and is padded. This means it has a plush coating which is extra protective for your device. The holder has a perfect fit. It is easy to put the device into the holder, and just as easy to take it with you when leaving the vehicle. The holder fits for iPhone without skin and without Apple original Bumper (does NOT fit for iPhone with skin or Apple original Bumper).

The holder is equipped with a tilt swivel so you can adjust the angle of your device in order to avoid light reflection on the screen. You can tilt the holder 22° in each direction. Attach onto ProClip Mounting Platform.

EAN: 7320285114449


Item no 511444 fits:

Apple iPhone 5 (For all countries)


Apple iPhone 5S (For all countries)

INSTALLATION INSTRUCTIONS

1.

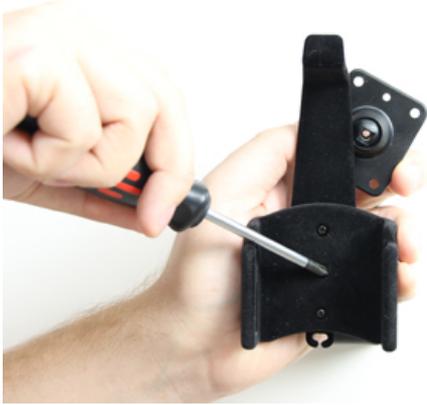

2.

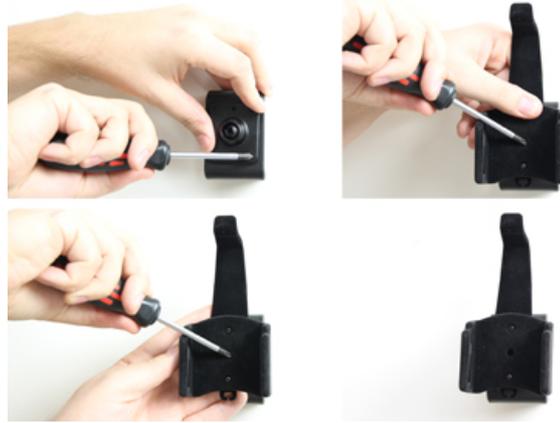

3.



4.



Please read all of the instructions and look at the pictures before attaching the holder.

1. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back.

2. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Screw a few turns on the screw, just so the thread starts to pull. Pull the holder toward you and hold it slightly tensed, in the same time tighten the screw so the holder is pulled toward the tilt swivel. Tighten the screw until the holder is firmly in place, but still can be adjusted.

3. To place the device in the holder: Place the bottom part of the device into the holder. Press the top of the device forward and in the same time slide the device downward into place in the holder. To remove the device from the holder: Press the upper part of the holder forward. When the device is set free, lift it upward out of the holder.

4. The holder is in place.